

# Flash 2 Open Fitting Instructions

## Car Transmitter

1. Position and Fix the transmitter in the engine compartment. Near to the headlight.


2. Connect the transmitter to the power supply (car battery), with the red wire on the positive (+) and the black wire on the negative (-)

3. Connect the transmitter control wire to the wire in the car that activates the flash of the head lights.

### Programming Instructions

Transmitters and receivers bought in pairs will be programmed to work with each other from the factory, but if you have purchased a new transmitter then you will have to program this in.

1. Hold the button on the new receiver for 5 seconds until the light flashes.
2. Sit in your car and flash your headlights within 1 minute.
3. The receiver light will stop flashing.

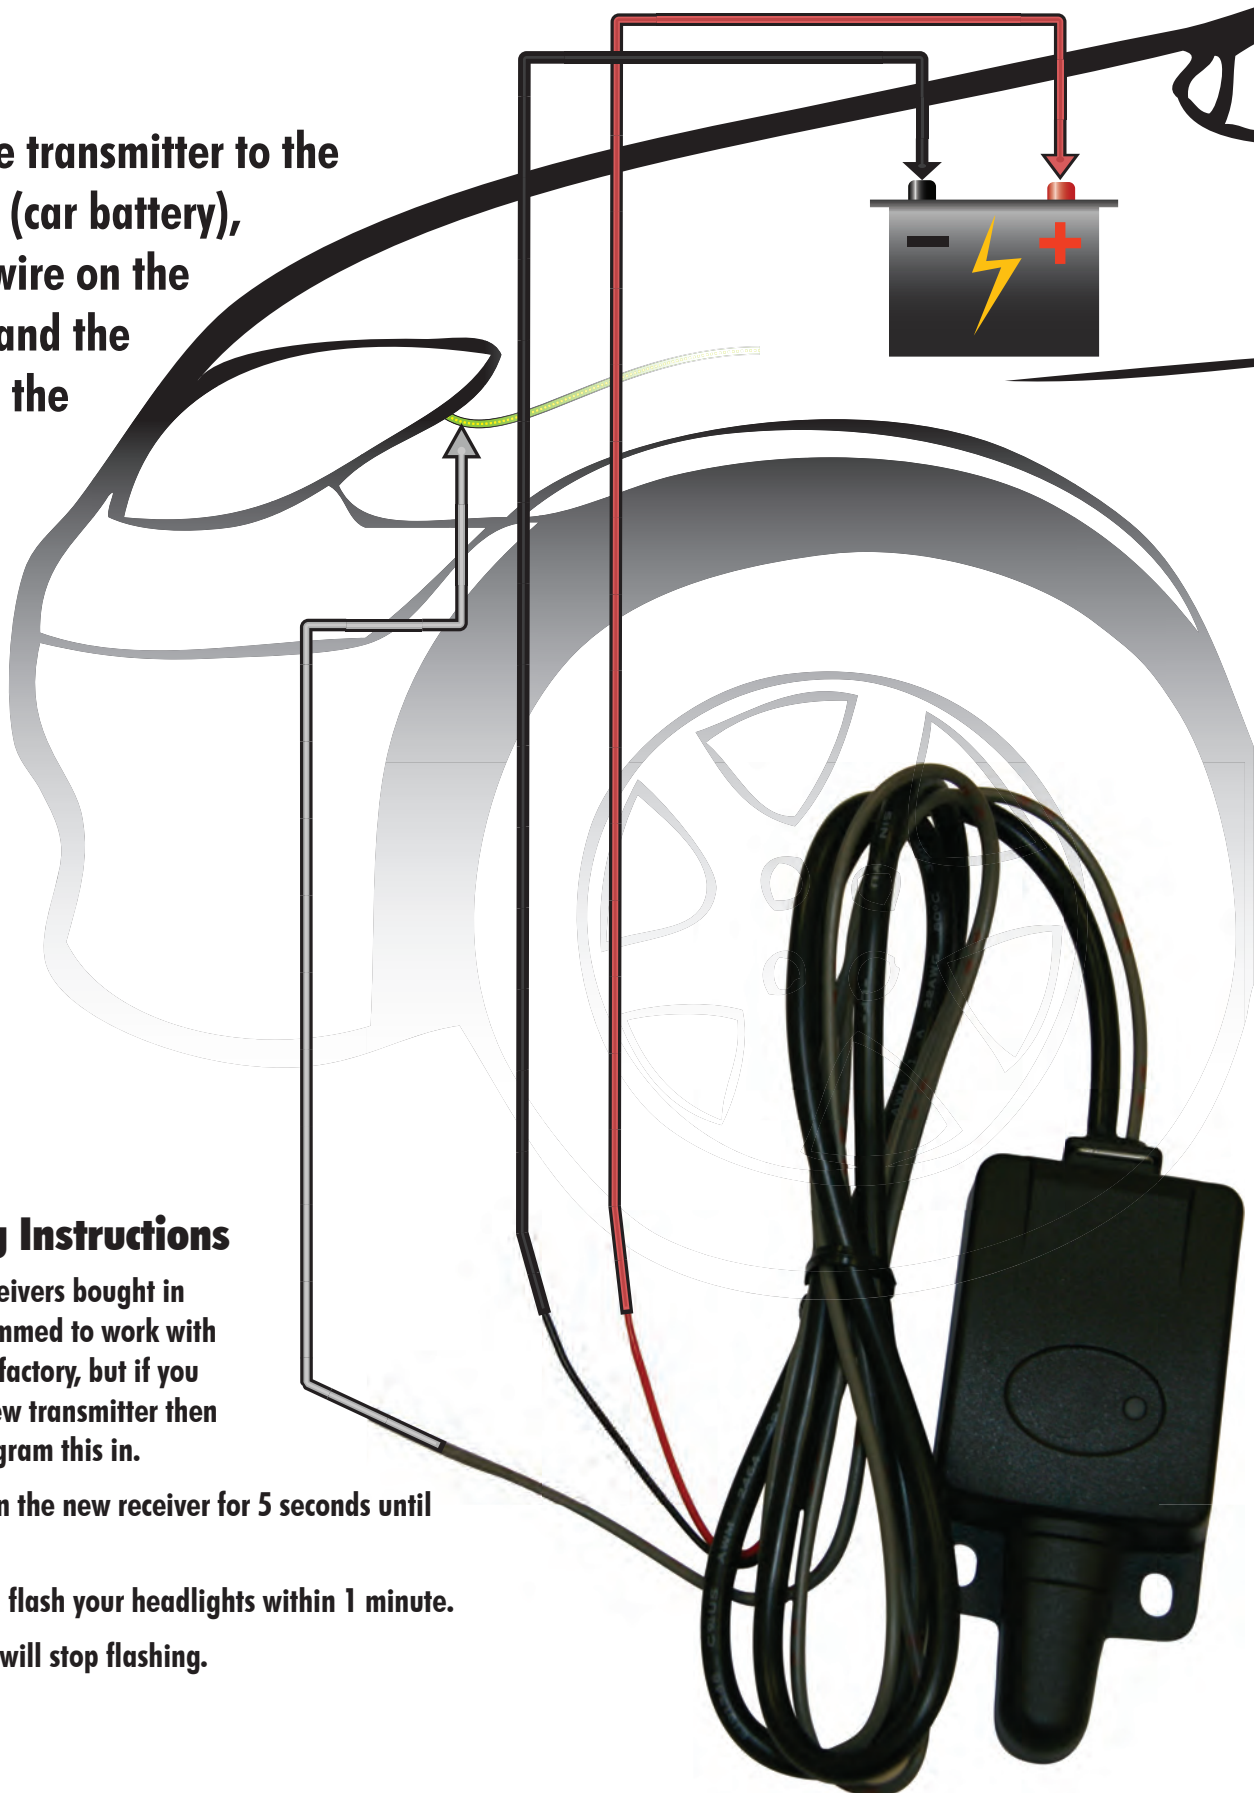

# Flash 2 Open Fitting Instructions


## Control Board Receiver

1. Position and Fix the receiver into the control board housing.

2. Connect the receiver to the power supply on the control board, with the red wire on the positive (+) and the black wire on the negative (-) of the 24v output.

3. Connect the receivers control wires to the control inputs of the control panel.

Negative (-)  
Positive (+)  
Volt Free  
Normally Open  
Contacts

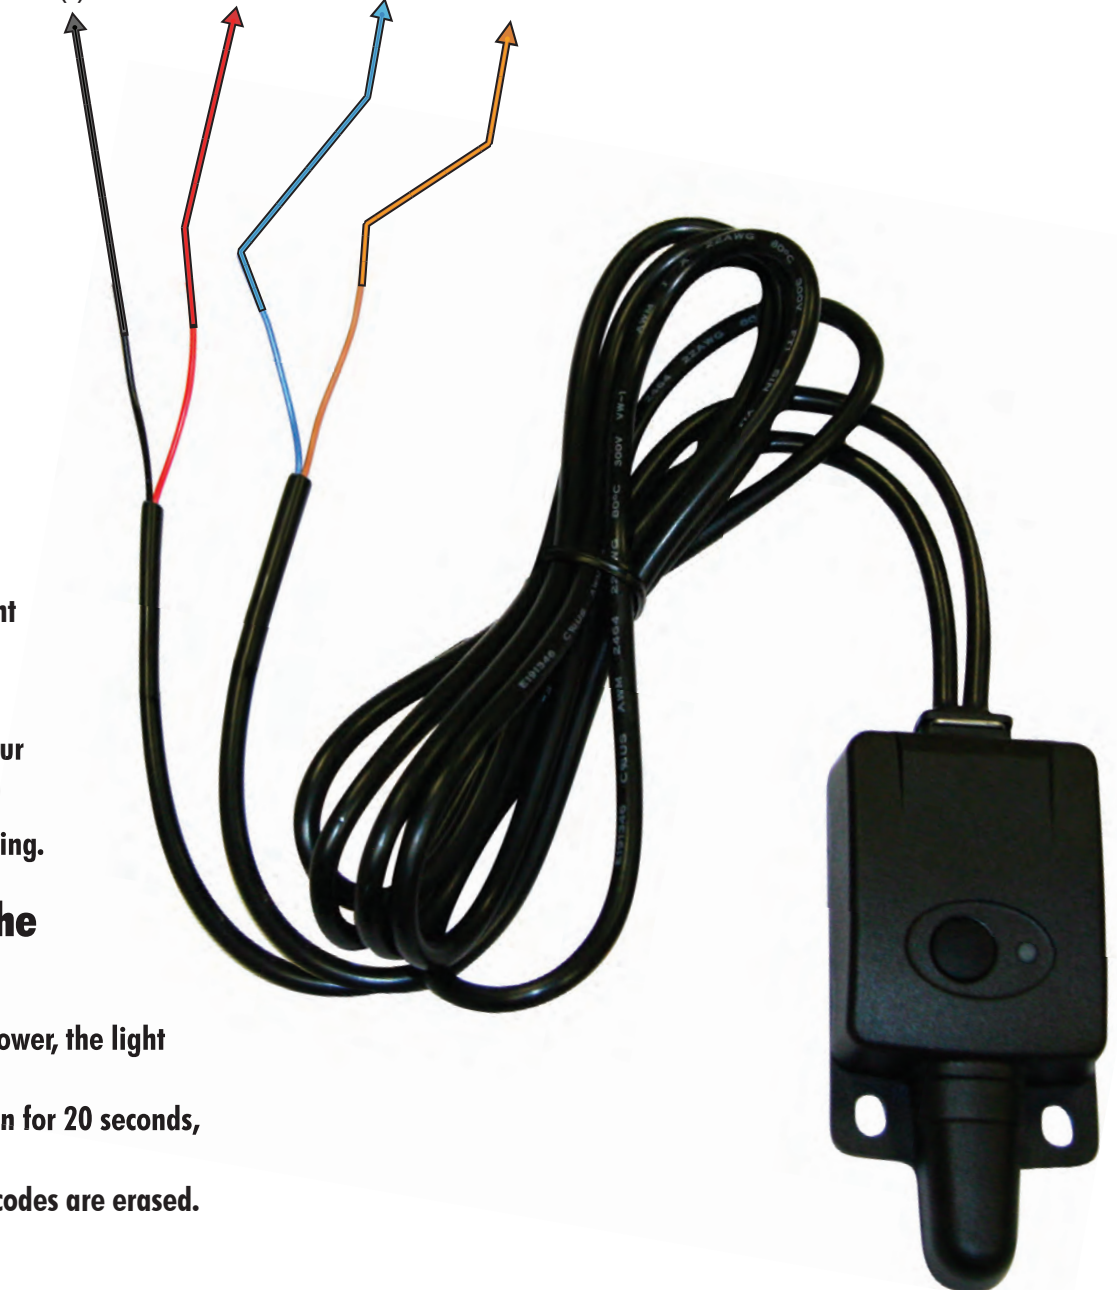

## Programming Instructions

Transmitters and receivers bought in pairs will be programmed to work with each other from the factory, but if you have purchased a new receiver then you will have to program this in.

1. Hold the button on the new receiver for 5 seconds until the light flashes.
2. Sit in your car and flash your headlights twice. (3 times if it's your third receiver etc up to 5 receivers)
3. The receiver light will stop flashing.

## Erasing the codes on the receiver

1. Disconnect then reconnect the power, the light should be green.
2. Within 3 seconds push the button for 20 seconds, until light flashes red.
3. When the light turns green the codes are erased.